


SPRAY APPLICATION TECHINICAL BULLETIN


Spray application of paint to GypSorb Perforated Gypsum Panels

For applications where paint must be applied to GypSorb Perforated Gypsum Panels using a spraying process, the following protocol must be adhered to:


- The angle of the spray must be no greater than 20° relative to the surface of the installed GypSorb Panel:

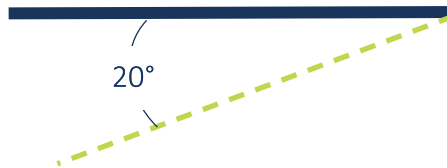

- Spray must be applied in a minimum of 4 converging directions.

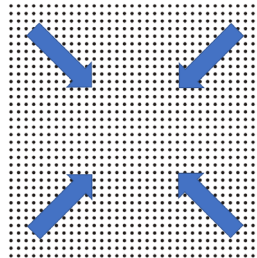

- Special care must be taken to avoid any overspray from contacting the acoustical scrim that is attached to the backside of the board.

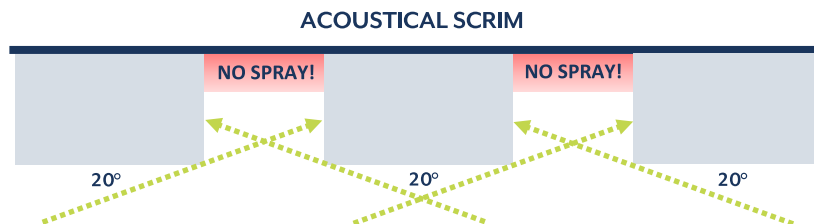

- Back-roll with a dry roller after spraying in order to avoid any pooling of paint within the perforations which could lead to drip marks and build up around the perforation opening.

info@gypsorb.com